


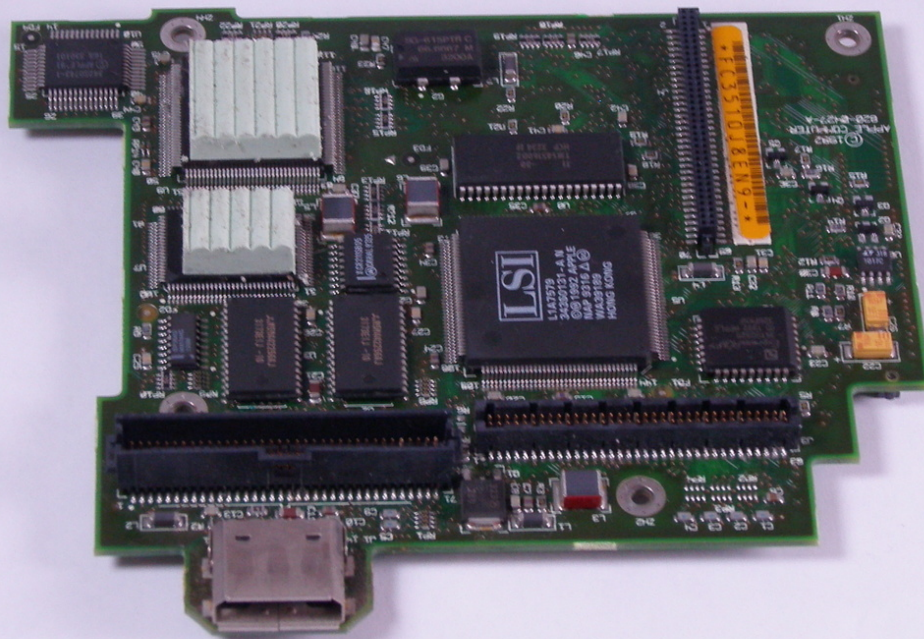

Macintosh PowerBook 165c Daughterboard Replacement

This guide will demonstrate how to replace the Macintosh PowerBook 165c daughterboard.

Written By: Adam



INTRODUCTION

This guide will show you how to replace the daughterboard.



TOOLS:

- [T8 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Orient the computer so the battery is facing you.
- Slide the gray plastic battery cover to the right.

Step 2



- Pull the battery toward yourself until it is fully detached.

Step 3 — Input/Output Door



- Orient the computer right side up with the rear facing you.
- Open the Input/Output (I/O) door.

Step 4



- Carefully bend the door into an arch until one of the pins releases from its slot.
- Once one of the pins is free, remove the I/O door from the computer.

Step 5 — Lower Case



- Orient the computer with the bottom facing up and rear facing you. You should be able to read the Macintosh label in this position.

Step 6





- Use a T8 torx screwdriver to remove the 6.8mm long screw above and to the right of the modem jack.
- Twist counter clockwise to remove the screw.

Step 7




- Use a T10 torx screwdriver to remove the four, 18mm long screws from the lower case.

Step 8

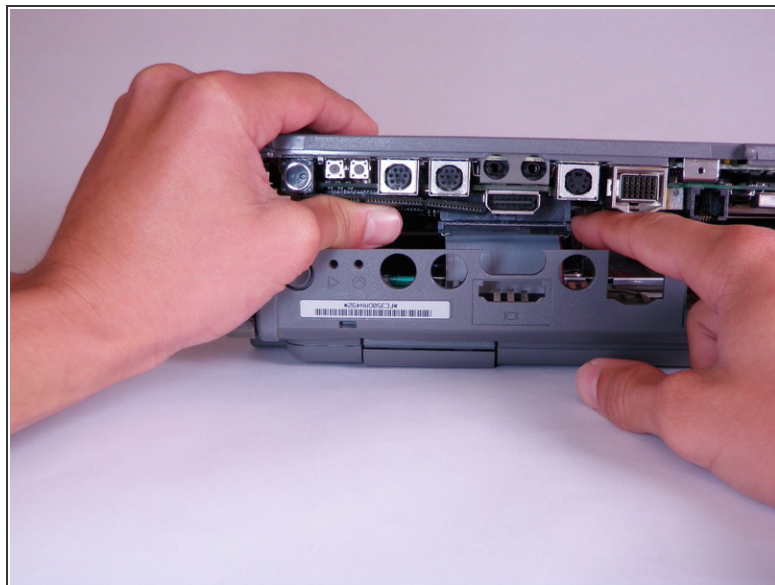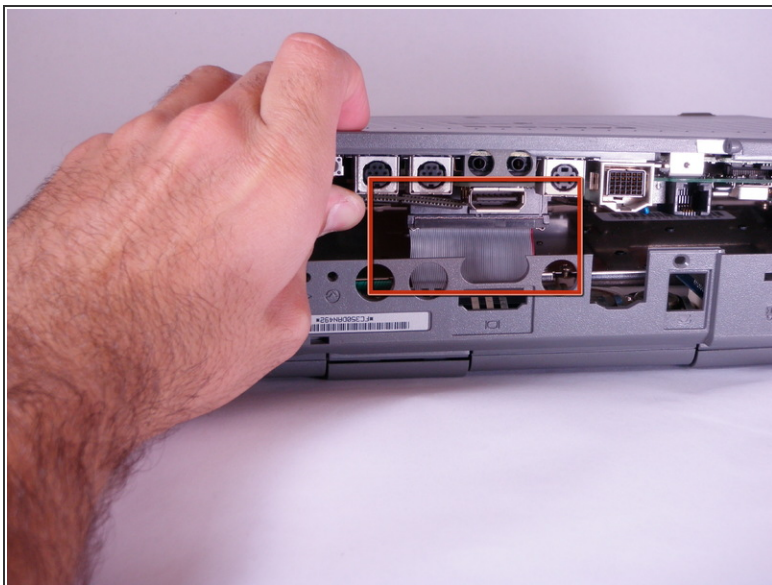



- Place your hands on the lower case, just above the I/O panel, and slowly lift the lower case a few inches above the main body of the computer.
 - Release the large, gray interconnect ribbon cable just behind the I/O panel.
- ⚠ Caution: Lower case cannot be fully removed until two plastic clips in the front corners are released. See the following step for details.

Step 9

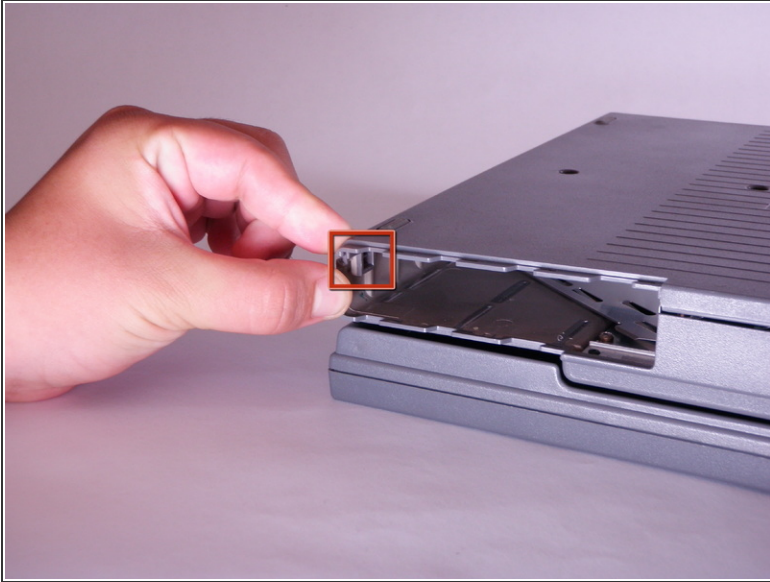


- Place your thumb on the upper case, inside the empty battery slot, and your index finger near your thumb on the left side of the lower case.
- Pinch your thumb and index finger towards each other to release the clip. Without releasing pressure on the pinch grip, use your index finger to push the lower case upwards.
- Lift the lower case to remove it.

Step 10 — RAM and PSRAM Expansion Card

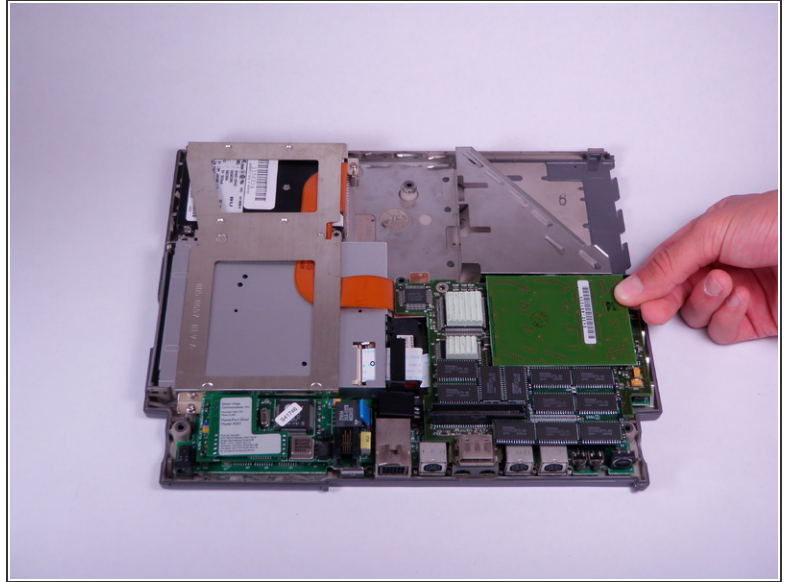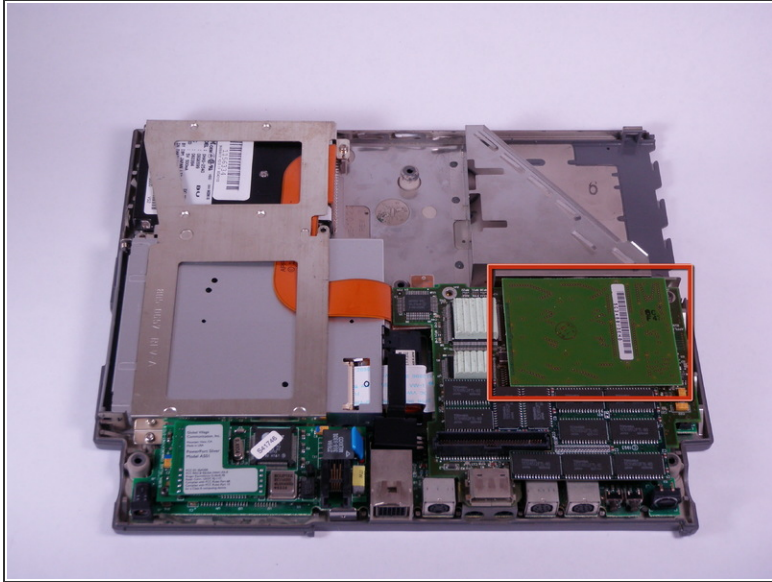


- Locate and lift ram card directly up until connector releases.
- Move the card back and forth gently if the connector does not release immediately.

Step 11

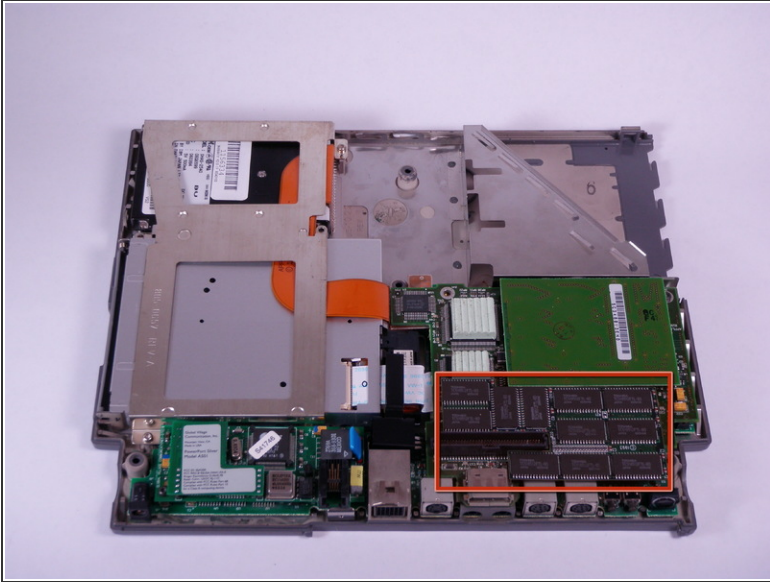


- Locate and lift the PSRAM expansion card vertically until connector releases.
- If the PSRAM expansion card is difficult to remove, gently jostle it back and forth as you lift up.
- ⓘ The PSRAM expansion card is an optional component, and may not be included in all devices.

Step 12 — Daughterboard

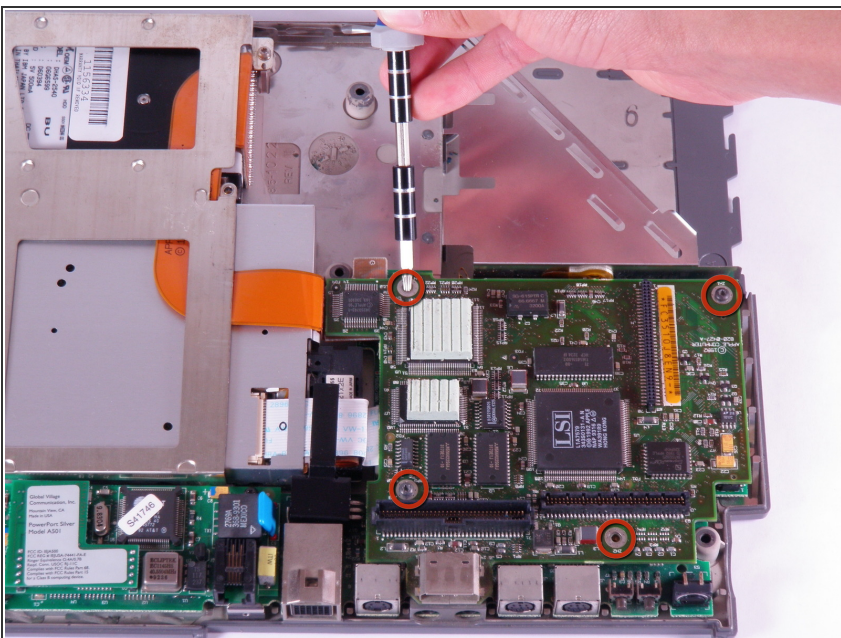

- Use T8 torx screwdriver to remove four, 7.7mm long screws from the perimeter of the daughterboard.

Step 13

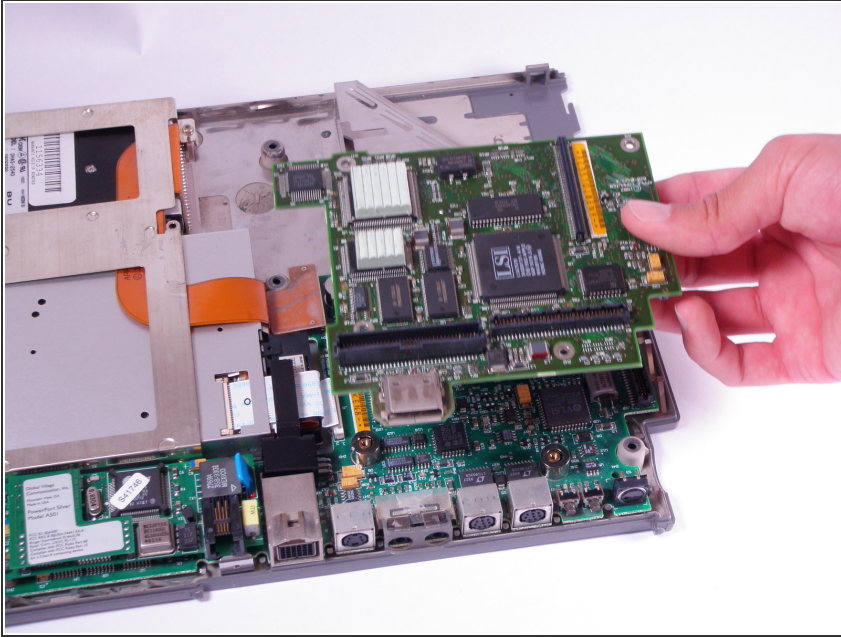

- Lift the daughterboard directly up to remove it from the connector.
- If the daughterboard does not easily release from the connector, gently jostle it back and forth as you lift up.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 04:58:35 AM.